


MOTION PICTURE MINIATURES



www.motionpictureminiatures.com

The following instructions are only intended to be a very basic guide for assembly. The builder is encouraged to use their own best judgment on how to approach the assembly of the parts, depending on their own specific goals for their project.



1 - Using sharp scissors or scalpel blade, trim the excess material from the parts. Flat-sand the back of the parts if desired.

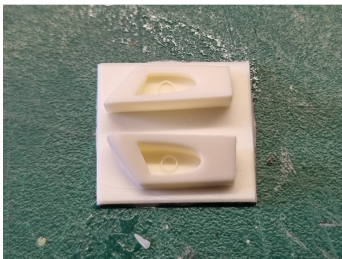

2 - Mark a line approx. 13mm from the rear of the nacelle root, and mark the centre of the back face. Using whichever method you prefer, remove the required material.

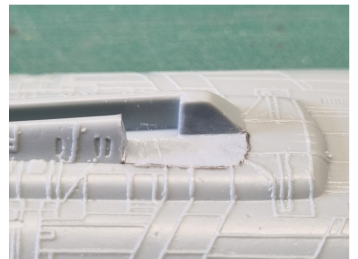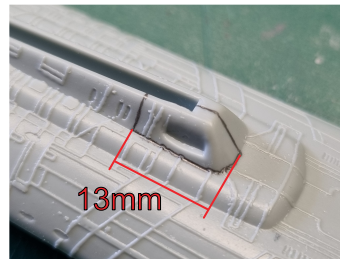


3 - Test fit regularly whilst removing material, avoid removing too much material at once. Refine until the part fits flush with the surrounding nacelle root. Due to the depth of the port recess, the part will encroach into the slot for the pylon joint. **DO NOT** try to sand the back the resin part to reduce this - you will blow-through the inner port detail.

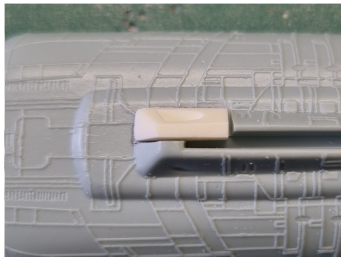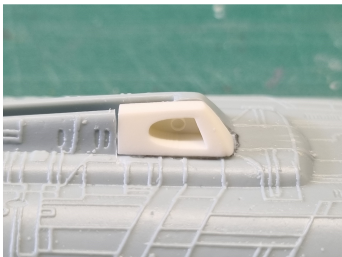

4 - Remove a small section of the pylon joint tab to avoid clashing with the resin part.

Fill and sand any remaining gaps and seams as usual.

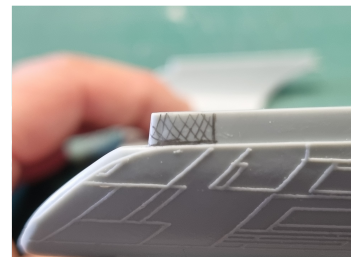

www.facebook.com/mpminiatures