


MOTION PICTURE MINIATURES

www.motionpictureminiatures.com

The following instructions are only intended to be a very basic guide. The builder is encouraged to use their own best judgment on how to approach the assembly of the parts, depending on their own specific goals for their project.

A section of excess molding flash needs to be removed from the base of the part before use. Cut along, or grind away material to the red line.

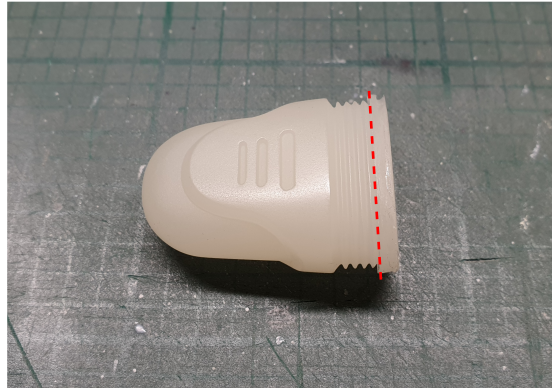

The Bussard Collector parts are cast in a semitransparent-translucent resin which diffuses lighting extremely effectively. There is no need to take extra steps to add further diffusion. The example shown here was done simply by masking the front area, drilling 2 X 3mm holes in the back of the part and fitting 3mm red LED's.

(note: the excess molding flash has not been removed in this example. It must be cut off or ground away before proper use)



www.facebook.com/mpminiatures